

**CE AVIONICS CAPABILITIES LIST AS OF 01/21/09****PH.# 407-323-0200**

<b>PART NUMBER</b>	<b>MODEL</b>	<b>DESCRIPTION</b>
064-1003-XX	KTR-900	COMM R/T
064-1004-XX	KTR-9000	COMM R/T
064-1005-XX	KTR-9100A	COMM R/T
064-1006-00	KTR-900A	COMM R/T
064-1009-XX	KTR-905/E	COMM R/T
064-1015-00	KTR-953	HF RECEIVER/EXC
064-1016-00	KCU-951	HF CONTROL
064-1017-XX	KAC-952	HF ANT COUPLER
064-1019-XX	KY-196/E	COMM R/T
064-1021-XX	KY-197/E	COMM R/T
064-1023-00	KTR-908	COMM R/T
064-1047-XX	VC-401B	COMM R/T
064-1053-XX	KY-197A	COMM R/T
064-1054-XX	KY-196A	COMM R/T
065-0014-XX	KSA-370	SERVO
065-0016-01	KDC-380	AIRDATA COMPUTER
065-0017-XX	KMC-340	MODE CONTROLLER
065-0018-XX	KCP-320	FLIGHT COMPUTER
065-0019-XX	KAC-325	AUTOPILOT COMPUTER
065-0020-00	KDC-381	AIRDATA COMPUTER
065-0027-XX	KS-270	SERVO
065-0028-XX	KS-271	SERVO
065-0029-XX	KS-272	SERVO
065-0030-00	KM-275	MOUNT
065-0031-XX	KM-276	MOUNT
065-0032-XX	KA-285	PANEL
065-0033-00	KC-290	CONTROLLER
065-0034-XX	KC-295	COMPUTER
065-0035-XX	KC-291	CONTROLLER
065-0036-XX	KC-296	YAW COMPUTER
065-0037-00	KC-292	CONTROLLER
065-0040-XX	KS-273	SERVO
065-0059-XX	KS-270A	SERVO
065-0060-XX	KS271A	SERVO
065-0061-XX	KS-272A	SERVO
065-5006-XX	KA-117	TRIM ADAPTER
065-5020-XX	KA-142	ADAPTER
066-1005-00	KGS-680	GLIDESLOPE RECEIVER
066-1006-00	KGM-690	G/S MKR RECEIVER
066-1008-00	KNR-660	NAV RECEIVER
066-1010-00	KNR-600	NAV RECEIVER
066-1011-00	KXP-750	TRANSPONDER
066-1016-XX	KDF-800	ADF RECEIVER
066-1019-XX	KDM-7000	DME R/T
066-1021-XX	KR-21	MARKER RECEIVER
066-1022-01	KDF-8000	ADF RECEIVER
066-1023-00	KR-85	ADF RECEIVER
066-1024-XX	KMA-20	AUDIO MARKER

part.query

066-1025-XX	KXP-750A	TRANSPONDER
066-1026-XX	KNR-600A	NAV RECEIVER
066-1027-00	KNR-660A	NAV RECEIVER
066-1029-XX	KN-65/A	DME R/T
066-1030-00	KNR-601	NAV RECEIVER
066-1031-00	KNR-661	NAV RECEIVER
066-1033-00	KN-73	G/S RECEIVER
066-1034-XX	KT-76	TRANSPONDER
066-1034-XX	KT-78	TRANSPONDER
066-1035-XX	KGM-691	GLIDESLOPE / MKR
066-1036-00	KGS-681	GLIDESLOPE RECEIVER
066-1037-XX	KDM-705/A	DME R/T
066-1038-00	KR-86	ADF RECEIVER
066-1039-XX	KT-44	RADAR R/T
066-1041-00	KXP-755	TRANSPONDER
066-1043-XX	KNR-615	NAV RECEIVER
066-1044-00	KMR-675	MARKER RECEIVER
066-1046-00	KDA-335	DISPLAY ADAPTER
066-1047-00	KDF-805	ADF RECEIVER
066-1048-XX	KRA-405	RADIO ALTIMETER R/T
066-1053-00	KT-79	TRANSPONDER
066-1055-XX	KMA-24/H	AUDIO PANEL / MKR
066-1062-00	KT-76A	TRANSPONDER
066-1062-XX	KT-78A	TRANSPONDER
066-1063-00	KN-75	GLIDESLOPE RECEIVER
066-1064-00	KN-62	DME R/T
066-1066-XX	KDM-706/A	DME R/T
066-1067-00	KN-53	NAV RECEIVER
066-1068-XX	KN-62A	DME R/T
066-1069-XX	KDI-573	DME INDICATOR
066-1069-XX	KDI-574	DME INDICATOR
066-1069-XX	KDI-572	DME INDICATOR
066-1070-XX	KN-63	DME R/T
066-1071-XX	KXP-756	TRANSPONDER
066-1072-XX	KR-87	ADF RECEIVER
066-1077-XX	KDF-806	ADF RECEIVER
066-1078-XX	KNR-634 /A	NAV RECEIVER
066-1088-XX	KN-64	DME R/T
066-1091-00	KDI-573B	DME INDICATOR
066-1101-XX	VN-411B	NAV RECEIVER
066-1103-XX	TR-421B	TRANSPONDER
066-1104-XX	DF-431()	ADF RECEIVER
066-1105-XX	DF-431()	ADF RECEIVER
066-1107-XX	DM-441B	DME R/T
066-1153-0101	KRA-406B	RADIO ALTIMETER R/T
066-3003-XX	KDI-570	DME INDICATOR
066-3008-02	KI-201C	NAV INDICATOR
066-3012-XX	KA-35	LIGHT ASSY MKR
066-3014-XX	KNI-585	ADF INDICATOR
066-3014-XX	KNI-580	ADF INDICATOR
066-3017-XX	KI-225	ADF INDICATOR
066-3018-00	KI-265	DME INDICATOR

part.query

066-3021-00	KI-226	RMI
066-3022-XX	KVN-395	VNAV COMPUTER
066-3025-00	KI-213	NAV INDICATOR
066-3025-XX	KI-214	NAV INDICATOR
066-3026-00	KI-240	RADAR INDICATOR
066-3029-XX	KI-525	HSI
066-3031-XX	KNI-415	RAD ALT INDICATOR
066-3032-XX	KDI-570	DME INDICATOR
066-3032-XX	KDI-571	DME INDICATOR
066-3034-00	KNI-416	RAD ALT INDICATOR
066-3034-03	KNI-416	RAD ALT INDICATOR
066-3034-XX	KI-202	NAV INDICATOR
066-3034-XX	KI-203	NAV INDICATOR
066-3034-XX	KI-204	NAV INDICATOR
066-3034-XX	KI-207	NAV INDICATOR
066-3034-XX	KI-206	NAV INDICATOR
066-3037-00	KI-261	DME INDICATOR
066-3038-00	KI-229	RMI
066-3039-00	KI-205	NAV INDICATOR
066-3042-XX	KNI-581	RMI INDICATOR
066-3044-00	KNI-416	RAD ALT INDICATOR
066-3046-XX	KI-525A	HSI
066-3047-XX	KI-266	DME INDICATOR
066-3052-00	KI-267	DME INDICATOR
066-3056-XX	KI-209	NAV INDICATOR
066-3056-XX	KI-208	NAV INDICATOR
066-3057-XX	KDM-7000B	DME R/T
066-3059-XX	KI-228	ADF INDICATOR
066-3060-XX	KNI-582	RMI INDICATOR
066-3063-XX	KI-227	ADF INDICATOR
066-3065-XX	KI-244	RADAR INDICATOR
066-3076-XX	KI-248	RADAR INDICATOR
066-3084-00	IN-182A	RADAR INDICATOR
066-3114-XX	IN-812A	RADAR INDICATOR
066-4002-XX	KNC-610	R-NAV COMPUTER
066-4003-00	KN-74	R-NAV COMPUTER
066-4004-00	KN-77	CONVERTER
066-4005-00	KCU-565A	NAV DISPLAY KNR
066-4006-XX	KNR-665	NAV / RNAV
066-4007-00	KNR-630	NAV RECEIVER
066-4007-01	KNR-631	NAV RECEIVER
066-4007-02	KNR-632	NAV RECEIVER
066-4007-03	KNR-633	NAV RECEIVER
066-4008-XX	KNS-80	R-NAV
066-4009-00	KN-72	CONVERTER
066-4010-00	KNR 665A	NAV RNAV/COV/GS
069-1010-00	KI-212	NAV INDICATOR
069-1010-04	KI-211C	NAV INDICATOR
069-1014-00	KX-170	NAV/COMM
069-1016-00	KX-175	NAV/COMM
069-1017-00	KX-170A	NAV/COMM
069-1019-XX	KX -175B	NAV/COMM

part.query

069-1020-00	KX-170B	NAV/COMM
069-1021-XX	KY-195/B	COMM R/T
069-1022-00	KX-145	NAV /COMM
069-1024-XX	KX-155	NAV/COMM
069-1025-XX	KX-165	NAV/COMM
071-0003-00	KA-40	MARKER LIGHT ASSY
071-0004-00	KA-43	CONVERTER
071-0006-00	KA-47	DME CODE CONVERTER
071-0016-00	KA-58	A/P ADAPTER
071-1010-00	KNR-600	NAV RECEIVER
071-1012-XX	KFS-590A/B	COMM CONTROL
071-1013-XX	KFS-560	NAV CONTROL
071-1014-XX	KFS-570	ATC CONTROL
071-1033-00	KFS-580	ADF CONTROL
071-1034-00	KA-36	LOOP ANTENNA
071-1035-XX	KMT-110	FLUX VALVE
071-1038-00	KFS-575	ATC CONTROL
071-1041-01	KA-39	POWER CONVERTER
071-1043-XX	KFS-570A	ATC CONTROL
071-1051-XX	KA-49	RADAR ANTENNA
071-1052-00	KMT-112	FLUX VALVE
071-1053-XX	KA-51A	SLAVE ACCESSORY
071-1054-XX	KFS-560B	NAV CONTROL
071-1060-XX	KCU-561	NAV CONTROL
071-1061-XX	KCU-578	DISPLAY ADF/ATC
071-1062-XX	KCU-591	HF CONTROL
071-1066-XX	KFS-580B	ADF CONTROL
071-1067-XX	KFS-585B	ADF CONTROL
071-1069-XX	KCU-582	ADF CONTROL
071-1072-XX	KDE-566	DATA LOADER
071-1074-00	KDA-696	BATTERY PACK
071-1076-00	KDA-697	RMI CONVERTER
071-1085-00	KA-122	DME HOLD ADAPTER
071-1087-XX	KA-119	AUDIO CONTROL
071-1098-00	KA-42A	ADF ANTENNA
071-1133-00	KA-42B	ADF ANTENNA
071-1143-00	KDA-698	MEMORY TIMER
071-1148-00	KA-135	MATCHING ASSY
071-1192-XX	KFS-576	ATC CONTROL
071-1196-00	KA-44	ADF ANTENNA
071-1210-XX	KFS-586/A	ADF CONTROL
071-1215-XX	KFS-598	COMM CONTROL
071-1216-XX	KFS-564	NAV CONTROL
071-1220-XX	KA-126	RADAR R/T
071-1234-00	KA-44B	ADF ANTENNA
071-1242-XX	KA-51B	SLAVE ACCESSORY
071-1268-XX	KA-594	ADAPTER
071-1274-XX	KFS-594	HF CONTROL
071-1282-XX	KFS-598A	COMM CONTROL
071-1283-XX	KFS-564A	NAV CONTROL
071-1284-XX	KFS-586	ADF CONTROL
071-1285-XX	KA-128	RADAR ART

part.query

071-1341-XX	CD-402B	CONTROL
071-1343-XX	CD-412B	CONTROL
071-1345-XX	CD-422B	CONTROL
071-1347-XX	CD-432B	ADF CONTROL
071-1350-XX	SD-442B	DME CONTROL
071-1370-00	RS 811A	RADAR ART
071-1377-XX	CD-413B	NAV CONTROL
071-1378-00	RS-811A	RADAR ART
071-1503-04	KA-51A	SLAVING SWITCH
071-2003-00	KAA-445	AUDIO CENTER
071-2006-XX	KA-37	AUDIO CONTROL PANEL
071-2007-XX	KAA-455	AUDIO CENTER
071-2009-02	KA-134	AUDIO CONTROL
097768-0101	1014A	TRANSPONDER
097768-0201	1014B	TRANSPONDER
1880758-2	FGS-70	MOTOR SPEED CONTROLLER
1954492-X	FGS-70	COMMAND COMPUTER
1954493-X	FGS-70	CONTROL COMPUTER
1975548-X	FGS-70	MODE CONTROLLER
1975549-X	FGS-70	AUTOPILOT CONTROLLER
1U008-04	3014D	TRIM SERVO
1U008-05	3014F	TRIM SERVO
1U008-06	3014G	TRIM SERVO
1U008-08	3014H	TRIM SERVO
1U009-05	1V009-05	COMPUTER SHOCKMOUNT
1U014-04	3013H	SERVO
1U014-05	3013J	SERVO
1U016-02	6744A-1	ADAPTOR
1U030-05	5487C-1	FLIGHT CONTROLLER
1U030-06	5487D-1	FLIGHT CONTROLLER
1U030-07	5487D-1	FLIGHT CONTROLLER
1U030-08	5487F-1	FLIGHT CONTROLLER
1U030-09	5487C-2	FLIGHT CONTROLLER
1U030-10	5487C-2	FLIGHT CONTROLLER
1U030-11	5487D-2	FLIGHT CONTROLLER
1U030-12	5487F-2	FLIGHT CONTROLLER
1U043-01	4090A	INDICATOR
1U088-XX	5536E	COMPUTER
1U096-01	5489A	SWITCH
1U096993-10	2203J	ALTITUDE CONTROLLER
2087827-XXXX	TRA-61A	TRANSPONDER
2087948-XXXX	TRA-61AL	TRANSPONDER
229-9015-010	590A-6	ALTITUDE CONTROL
270-0859-010	590A-6A	ALTITUDE CONTROL
270-2436-XXX	613L-3	ATC CONTROL
300-2084-XX	KM-277	MOUNT
321-112-45-000	Y-SERIES	CONTROL
35070-XXXX	PA-500A	ACTUATOR
3614001-XXXX	VC-401B	COMM R/T
3614004-XXXX	VN-411B	NAV RECEIVER
3614009-4201	TR-421B	TRANSPONDER
3614019-XXXX	DM-441B	DME R/T DME R/T

part.query

37960-1120	C-530A	CONTRL UNIT
38100-XXXX	PA-520A	TRIM ACTUATOR
400-0018-2	C-114	CONTROL
400-0019-XXX	HH-114	HANDSET
400-0028-000	C-115	COCKPIT CONTROL
400-0030-XXX	WH-18	HANDSET
400-0031-XXX	HH-118	FLITE PHONE CONTROL
400-0032-XXX	C-118	CABIN CONTROL
400-0033-XXX	RT-18A	FLITE PHONE R/T
400-0038-001	C-117-6	CONTROL
400-0039-000	C-119	CONTROL
400-0041-000	C-120-6	CONTROL
400-0044-000	WT-200	COMM R/T
400-0050-000	WT-2000	COMM R/T
400-0093-XXX	WH-4	CABIN CONTROL
400-0107-XXX	WT-200B	COMM R/T
400-0122-XXX	WH-6	FLITEFONE CONTROL
400-0123-XXX	WH-10	FLITEFONE CONTROL
400-0124-XXX	C-118D	FLITEFONE CONTROL
400-0125-XXX	RT-18D	FLITEFONE R/T
400-0138-XXX	C-118E	FLITEFONE CONTROL
4000186-8502	AC-844B	ALTITUDE CONTROLLER
4000191-8501	FX-833A	FLUX SENSOR
4000191-8502	FX-833A	FLUX SENSOR
4000192-8501	IN-835A	SLAVING METER
4000202-8501	EC-834A	ERROR CORRECTOR
4000225-8502	2203J	ALTITUDE CONTROLLER
4000256-XXXX	FC-813( )	FLIGHT CONTROLLER
4000288-XXXX	CA-814( )	COMPUTER
4000289-XXXX	PS815( )	POWER SUPPLY
4000290-XXXX	SA-816( )	ROLL SERVO
4000293-XXXX	PS-819( )	ADAPTER
4000315-XXXX	FC-823( )	CONTROLLER
4000368-XXXX	AD-816A	ADAPTER
4000493-8501	5487G	FLIGHT CONTROL
4000494-8501	5486A	MODE SELECTOR
4000495-8501	5536F	COMPUTER
4000502-0101	RT-1201A	RADAR R/T
4000503-XXXX	IN-1202A	RADAR INDICATOR
4000504-XXXX	DA-1203A	RADAR ANTENNA
4000507-8501	5485A	FLIGHT CONTROL
4000523-8501	3013H	SERVO
4000524-8505	3014D-2	TRIM SERVO
4000524-8506	3014F-2	TRIM SERVO
4000524-8507	3014G-2	TRIM SERVO
4000524-8508	3014H-2	TRIM SERVO
4000524-8509	3014J-2	TRIM SERVO
4000524-8510	3014K-2	TRIM SERVO
4000524-8511	3014L-2	TRIM SERVO
4000526-XXXX	TR-661A	TRANSPONDERS
4000589-5401	AD-854A	TRIM ADAPTER
4000654-XXXX	AT-143A	RADAR ANTENNA

part.query

4000763-3101	RT-131A	RADAR R/T
4000764-XXXX	IN-132A	RADAR INDICATOR
4000765-XXXX	AT-133A	PARABOLIC ANT
4000790-XXXX	DA-144A	RADAR ANTENNA
4000831-XXXX	RT-1401()	RADAR R/T
4000833-XXXX	IN-1402()	RADAR INDICATOR
4000875-XXXX	SC-833A	SLAVING CONTROL
4000918-XXXX	ST-873()	TRIM SERVO
4000946-XXXX	IN-152A	RADAR INDICATOR
4000964-XXXX	IN-1102A	RADAR INDICATOR
4000965-XXXX	IN-1302()	RADAR INDICATOR
4000966-XXXX	RT 1301()	RADAR R/T
4000976-XXXX	MA-872A	MODE ANNUNCIATOR
4000977-7203	FC-872A	FLIGHT CONTROLLER
4000978-XXXX	SA-873()	ROLL SERVO
4000980-XXXX	SR-874()	YAW SERVO
4001018-XXXX	ART-161A	RADAR ANT/RT
4001057-6601	TR-2061A	TRANSPONDER
4001098-XXXX	IN-1202B	RADAR INDICATOR
4001291-XXXX	IN-2021A	RADAR INDICATOR
4001294-XXXX	IN-2026A	RADAR INDICATOR
4001295-XXXX	IN-2027A	RADAR INDICATOR
4001373-XXXX	IN-2022A	RADAR INDICATOR
4001533-0201	FC-8702A	FLIGHT CONTROLLER
4001538-0401	CV-8704A	COMPUTER
4001539-0501	PT-8705A	TRANSDUCER
4001670-XXXX	IN-2025()	RADAR INDICATOR
4001845-XXXX	ART-231A	RDR ART
4001846-XXXX	INA-232A	RADAR INDICATOR
4001921-5101	RT-1151A	RADAR R/T
4001922-XXXX	IN-1152A	RADAR INDICATOR
4001948-XXXX	IN-1152B	RADAR INDICATOR
4004437-901	RT-220	RADIO ALTIMETER R/T
4004437-902	RT-221	RADIO ALTIMETER R/T
4004444-901	RA-210	RADIO ALTIMETER IND
4006451-0501	2268A-1	CAPSTAN
4007263-05XX	4007263-05XX	CALIBRATION BOARD
4007339-901	RA-220	RADIO ALTIMETER IND
4007339-902	RA-230	RADIO ALTIMETER IND
4009506-8501	3013J	SERVO
4009506-8502	3013K	SERVO
400965-0204	IN-1302A	RADAR INDICATOR
4014267-901	RA-215	RADIO ALTIMETER IND
41090-1128	C-531A	CONTROL UNIT
41110-XXXX	S-530A	MODE SELECTOR
41120-XXXX	CA-530A/FD	COMPUTER AMPLIFIER
41780-XXXX	C-830FD	CONTROL UNIT
4-2020SA10-XX	FC-110()	YAW CALIBRATION BOARD
4-2020SA12-XX	FC-110()	SERVO AMP BOARD
4-2020SA13-XX	FC-110()	LATERAL COUPLER SIGNAL BD
4-2020SA14-XX	FC-110()	LATERAL COUPLER LOGIC BD
4-2020SA15-XX	FC-110()	LONGITUDINAL COUPLER BD

part.query

4-2020SA16-XX	FC-110()	TRIM COUPLER BD
4-2020SA8-XX	FC-110()	PITCH CALIBRATION BOARD
4-2020SA9-XX	FC-110()	ROLL CALIBRATION BOARD
4-2020-XX	FC-110()	AUTOPILOT COMPUTER
4-2020-XXX	FC-110()	AUTOPILOT COMPUTER
42710-0000	S-550A	MODE SELECTOR
42860-XXXX	CA-550A/FD	AUTOPILOT AMPLIFIER
44400-XXXX	AS-895A	ALTITUDE SENSOR
44430-2825	TA-495A	TRIM ACTUATOR
45850-XXXX	PA-495-X	ACTUATOR
46210-XXXX	CA-1050A/FD	COMPUTER AMPLIFIER
46220-XXXX	PA-1050A	ACTUATOR
46240-0000	C-1050A	CONTROL UNIT
46250-0001	AC-1050A	AIR DATA UNIT
46260-0000	S-1050A	MODE SELECTOR
48110-XXXX	S-1050A-1	MODE SELECTOR
501-1075-XX	PS-823()	EMERGENCY POWER SUPPLY
501-10XX-XX	AC-111	AC- AUTOPILOT CONTROLLER
501-1107-XX	AC-200()	AUTOPILOT CONTROLLER
501-1108-XX	CA-200()	AUTOPILOT COMPUTER
501-1228-XX	PS-835()	EMERGENCY POWER SUPPLY
501-1254-XX	AC-111()	AUTOPILOT CONTROLLER
501-1256-XX	AC-200()	AUTOPILOT CONTROLLER
522-0710-XXX	614E-10()	MODE SELECTOR
522-0875-006	346D-1	ADDRESS AMP
522-0881-004	356F-1	SPEAKR AMP
522-1230-XXX	618T-X	HF R/T
522-1400-000	341C-1	SERVO AMP
522-1660-XXX	618T-3	HF TRANSCEIVER
522-1836-XXX	51Y-4(x)	ADF RECEIVER
522-1837-000	137A-5	ADF ANTENNA
522-1859-XXX	339D-1	DME INDICATOR
522-2357-XXX	614L-8	CONTROL
522-2446-XXX	313N-1	CONTROL
522-2447-XXX	313N-2/2D	RADIO CONTROL
522-2448-XXX	313N-3/3D	DUAL CONTROL
522-2449-XXX	313N-4	COMM CONTROL
522-2450-XXX	51RV-1	NAV RECEIVER
522-2466-004	618M-1	COMM R/T
522-2514-003	356C-2	AMP
522-2587-XXX	51Y-4A	ADF RECEIVER
522-2599-XXX	313N-5	CONTROL
522-2600-XXX	313N-6/6B	CONTROL
522-2604-XXX	339D-1A	DME INDICATOR
522-2644-XXX	51Z-4	MKR RECEIVER
522-2702-XXX	860-E2	DME R/T
522-2703-XXX	621-A3	TRANSPONDER
522-2754-XXX	618M-1( )	COMM R/T
522-2866-XXX	356C-4	ISOLATION AMP
522-2899-000	387C-4	AUDIO CONTROL
522-2901-XXX	APC-80	AUTOPILOT AMPLIFIER
522-2904-000	356C-5	AUDIO COMPENSATOR

part.query

522-2919-XXX	339D-3B	DME INDICATOR
522-2929-XXX	339D-3C	DME INDICATOR
522-2993-XXX	51R-7A	NAV RECEIVER
522-2996-XXX	51Z-4	MARKER RECEIVER
522-3132-004	618M-1D	COMM R/T
522-3343-XXX	339D-3D	INDICATOR
522-3467-XXX	51R-8A	NAV RECEIVER
522-3551-XXX	614E-4	AUTOPILOT CONTROLLER
522-3613-000	313N-4A	CONTROL
522-3614-000	313N-4B	CONTROL
522-3615-XXX	313N-4BA	CONTROL
522-3616-XXX	313N-4C	CONTROL
522-3616-XXX	313N-4D	CONTROL
522-3617-XXX	313N-5A	CONTROL
522-3690-XXX	313N-6C	CONTROL
522-3698-XXX	860F-1	RADIO ALTIMETER R/T
522-3763-XXX	346-B3	AUDIO AMP
522-3866-XXX	344C-1G	INSTRUMENT AMPLIFIER
522-3948-XXX	54W-1C	COMPARATOR WARNING MONITOR
522-3949-XXX	54W-1D	COMPARATOR WARNING MONITOR
522-4088-XXX	618M- 2B	COMM R/T
522-4089-XXX	618M-2D	COMM R/T
522-4114-XXX	339H-1	INDICATOR
522-4209-XXX	860E- 3	DME R/T
522-4280-XXX	51RV-2B	NAV RECEIVER
522-4353-001	346D-1A	AUDIO AMP
522-4354-002	339H-1A	RADIO ALTIMETER INDICATOR
522-4363-XXX	339H-1B	RADIO ALTIMETER INDICATOR
522-4366-101	51RV-1A	NAV RECEIVER
522-4408-XXX	313N-6F	CONTROL
522-4501-XXX	51RV-1C	NAV RECEIVER
522-4504-001	339H-1C	RADIO ALTIMETER INDICATOR
522-4538-XXX	346D-1B	AUDIO AMP
522-4625-001	339H-1D	RADIO ALTIMETER INDICATOR
522-4825-XXX	339H-2	RADIO ALTIMETER INDICATOR
522-4828-XXX	618T-1B	HF R/T
522-4830-XXX	618T-3B	HF R/T
522-4945-001	323A-2G	FLUX VALVE
522-4977-XXX	51RV-2B	NAV RECEIVER
542-1071	FC-110	FC-110 TRIM DISCONNECT BOARD
6097573-XXX	814B	TRANSPONDER
6097637-301	914B	TRANSPONDER
6097768-01XX	1014A	TRANSPONDER
6097768-02XX	1014B	TRANSPONDER
6097768-200	TP 114B	TRANSPONDER
622-0141-XXX	APP-80	AUTOPILOT CONTROL
622-0171-XXX	339H-3	RADIO ALTIMETER INDICATOR
622-0210-XXX	614E-23G	MODE COUPLER
622-0283-XXX	161F-1B	AIRDATA COUPLER
622-0410-001	860F-2	RADIO ALTIMETER R/T
622-0555-XXX	332C -10	RMI
622-0876-XXX	VIR-30A	NAV RECEIVER

part.query

622-0877-XXX	VIR-30M	NAV RECEIVER
622-0938-001	161F-1C	AIRDATA COUPLER
622-0964-XXX	344C-9	SERVO
622-0966-XXX	913K-1	AUTOPILOT COMPUTER/CONTROL
622-1036-001	161H-1	GAIN PROGRAMMER
622-1038-001	339H-1L	RADIO ALTIMETER INDICATOR
622-1116-XXX	562C-5B	AUTOPILOT AMPLIFIER
622-1181-XXX	618M-3	COMM R/T
622-1204-XXX	339H-4	RADIO ALTIMETER INDICATOR
622-1205-XXX	339H-4A	RADIO ALTIMETER INDICATOR
622-1233-XXX	DME-40	DME R/T
622-1234-XXX	339F-12	DME INDICATOR
622-1239-XXX	VIR-31A	NAV RECEIVER
622-1270-001	TDR-90	TRANSPONDER
622-1281-XXX	562C-5C	AUTOPILOT AMPLIFIER
622-1314-XXX	VHF-20B	COMM R/T
622-1396-XXX	618M-3A	COMM R/T
622-1522-XXX	562C-13	AUTOPILOT AMPLIFIER
622-1523-XXX	614E-38	MODE SELECTOR
622-1879-XXX	VHF-20A	COMM R/T
622-2012-XXX	339F-12A	DME INDICATOR
622-2078-XXX	VHF-251	COMM R/T
622-2079-XXX	VHF-250	COMM R/T
622-2080-XXX	VIR-351	NAV RECEIVER
622-2081-XXX	VIR-350	NAV RECEIVER
622-2082-XXX	IND-350	NAV INDICATOR
622-2083-XXX	IND-351	NAV INDICATOR
622-2084-001	GLS-350	G/S RECEIVER
622-2085-001	MKR-350	MARKER RECEIVER
622-2086-001	MKL-350	MARKER RECEIVER
622-2087-XXX	AMR-350	AMP
622-2088-XXX	AUD-250	AMP
622-2091-001	RCR-650	ADF RECEIVER
622-2092-XXX	TDR-950	TRANSPONDER
622-2093-001	PWC-150	POWER CONVERTER
622-2175-XXX	339F-12B	DME INDICATOR
622-2176-XXX	339F-12C	DME INDICATOR
622-2177-001	339F-12D	DME INDICATOR
622-2256-XXX	FGC-80	FLT GUIDANCE COMPUTER
622-2263-XXX	APA-80	AUTOPILOT AMPLIFIER
622-2265-XXX	FGP-81	FLT GUIDANCE PROGRAMMER
622-2313-XXX	FGP-80	FLT GUIDANCE PROGRAMMER
622-2362-001	ADF-60A	ADF RECEIVER
622-2363-001	ANT-60A	ADF ANTENNA
622-2366-XXX	334C-9A	SERVO
622-2425-XXX	IND-351C	NAV INDICATOR
622-2462-XXX	AMR-350H	AMP
622-2463-XXX	AUD-250H	AMP
622-2485-001	WXT-150	RADAR R/T
622-2486-XXX	IND-150	RADAR INDICATOR
622-2487-XXX	ANT-152	RADAR ANTENNA
622-2494-XXX	ANT-212	RADAR ANTENNA

part.query

622-2495-XXX	ANT-210	RADAR ANTENNA
622-2501-001	ANT-312	RADAR ANTENNA
622-2502-001	ANT-310	RADAR ANTENNA
622-2504-001	ANT-318	RADAR ANTENNA
622-2506-XXX	RMI-36	RMI
622-2536-001	IND-650	ADF INCICATOR
622-2614-012	562C-5F	AUTOPILOT AMPLIFIER
622-2733-XXX	334C-11	SERVO
622-2819-XXX	VIR-31H	NAV RECEIVER
622-2855-XXX	ALT-55B	RADIO ALTIMETER R/T
622-2873-001	ADF-60B	ADF RECEIVER
622-2937-XXX	ALI-55	RADIO ALTIMETER INDICATOR
622-2938-XXX	ALI-55A	RADIO ALTIMETER INDICATOR
622-3001-001	339F-12E	DME INDICATOR
622-3004-XXX	TDR-950L	TRANSPONDER
622-3101-XXX	AUD-251H	AMP
622-3102-001	MKR-351	MARKER RECEIVER
622-3104-XXX	FGC-80A	FLT GUIDANCE COMPUTER
622-3106-XXX	FGC-80B	FLT GUIDANCE COMPUTER
622-3108-XXX	APA-80A	AUTOPILOT AMPLIFIER
622-3109-XXX	APP-80A	AUTOPILOT CONTROL
622-3178-XXX	51Y-7C	ADF RECEIVER
622-3179-XXX	51Y-7D	ADF RECEIVER
622-3201-XXX	ALT-50A	RADIO ALTIMETER R/T
622-3255-XXX	51RV-4	NAV RECEIVER
622-3256-001	51RV-4A	NAV RECEIVER
622-3257-XXX	51RV-4B	NAV RECEIVER
622-3258-001	51RV-4C	NAV RECEIVER
622-3259-XXX	51RV-4D	NAV RECEIVER
622-3307-XXX	VHF-251S	COMM RECEIVER
622-3363-XXX	VHF-251E	COMM RECEIVER
622-3364-001	VHF-250S	COMM RECEIVER
622-3365-001	VHF-250E	COMM RECEIVER
622-3366-001	GLS-350E	G/S RECEIVER
622-3586-001	ANT-650A	ADF ANT
622-3587-001	RCR-650A	ADF RECEIVER
622-3670-001	TCR-451	DME R/T
622-3671-001	IND-450	DME INDICATOR
622-3672-001	IND-451	DME INDICATOR
622-3702-XXX	BDI-36	INDICATOR
622-3710-001	ANT-60B	ADF ANTENNA
622-3881-XXX	IND-40C	DME INDICATOR
622-3890-014	860F-4	RADIO ALTIMETER R/T
622-3896-XXX	FGC-80M	FLT GUIDANCE COMPUTER
622-3899-XXX	APC-80M	AUTOPILOT AMPLIFIER
622-3900-006	APA-80M	AUTOPILOT AMPLIFIER
622-3901-XXX	APP-80M	AUTOPILOT CONTROL
622-3915-XXX	IND-40	DME INDICATOR
622-3916-XXX	IND-40A	DME INDICATOR
622-3917-XXX	IND-40B	DME INDICATOR
622-3918-XXX	IND-41	DME INDICATOR
622-3919-XXX	IND-41A	DME INDICATOR

part.query

622-3920-XXX	IND-41B	DME INDICATOR
622-3921-XXX	IND-41C	DME INDICATOR
622-3992-XXX	APC-80A	AUTOPILOT AMPLIFIER
622-4020-001	ANT-212D	RADAR ANTENNA
622-4021-001	WXT-200A	RADAR R/T
622-4022-001	WXT-250A	RADAR R/T
622-4023-001	IND-200A	RADAR INDICATOR
622-4025-XXX	IND-250C	RADAR INDICATOR
622-4027-XXX	IND-250A	RADAR INDICATOR
622-4093-XXX	514A-7	HF CONTROL
622-4096-XXX	346D-2B	AMP
622-4160-XXX	DRI-55	RADIO ALTIMETER INDICATOR
622-4248-XXX	APA-80C	AUTOPILOT AMPLIFIER
622-4331-XXX	IND-300	RADAR INDICATOR
622-4477-XXX	IND-350A	NAV INDICATOR
622-4478-001	IND-351A	NAV INDICATOR
622-4479-001	IND-351D	NAV INDICATOR
622-4481-XXX	IND-30	NAV INDICATOR
622-4482-XXX	IND-31	NAV INDICATOR
622-4483-XXX	IND-31C	NAV INDICATOR
622-4487-001	346D-2	AMP
622-4523-XXX	CTL-20	COMM CONTROL
622-4524-XXX	CTL-30	NAV CONTROL
622-4526-XXX	CTL-60	ADF CONTROL
622-4527-XXX	CTL-90	ATC CONTROL
622-4938-XXX	RMI-30	RMI
622-4964-XXX	APC-80F	AUTOPILOT AMPLIFIER
622-5224-XXX	FGC-80F	FLT GUIDANCE COMPUTER
622-5367-001	ALI-55B	RADIO ALTIMETER INDICATOR
622-5441-XXX	APA-80F	AUTOPILOT AMPLIFIER
622-5588-001	IND-450C	DME INDICATOR
622-5796-XXX	APC-65	AUTOPILOT COMPUTER
622-5798-XXX	FCP-65	CONTROL PANEL
622-5799-XXX	MAP-65	MODE ANNUNCIATOR
622-5940-XXX	IND-220	RADAR INDICATOR
622-5941-XXX	IND-270	RADAR INDICATOR
622-5952-XXX	FGC-65	FLIGHT GUIDANCE COMPUTER
622-5953-XXX	FCP-65A	CONTROL PANEL
622-6137-001	VIR-32	NAV RECEIVER
622-6152-XXX	VHF-22A	COMM R/T
622-6153-XXX	VHF-22B	COMM R/T
622-6263-XXX	DME-42	DME R/T
622-6334-XXX	CTL-30R	NAV CONTROL
622-6389-XXX	VHF-21A	COMM R/T
622-6390-XXX	VHF-21B	COMM R/T
622-6513-001	ANT-312A	RADAR ANTENNA
622-6520-XXX	CTL-22	COM CONTROL
622-6521-XXX	CTL-32	NAV CONTROL
622-6522-XXX	CTL-62	ADF CONTROL
622-6523-XXX	CTL-92	ATC CONTROL
622-6524-XXX	IND-42A	DME INDICATOR
622-6590-01	CAD-62	CONTROL ADAPTER

part.query

622-6633-001	ANT-318A	RADAR ANTENNA
622-6684-XXX	APP-65A	AUTOPILOT PANEL
622-7309-101	DME-442	DME R/T
622-7318-XXX	IND-42C	DME INDICATOR
622-7337-XXX	WXT-250B	RADAR R/T
622-7444-001	ANT-310A	RADAR ANTENNA
622-7562-034	APA-80G	AUTOPILOT AMPLIFIER
622-7890-XXX	APC-65A	AUTOPILOT COMPUTER
622-8315-XXX	APC-65B	AUTOPILOT COMPUTER
622-8332-001	CAD-31	CONTROL ADAPTER
622-8434-XXX	APC-65C	AUTOPILOT COMPUTER
622-8630-XXX	FGC-80G	FLT GUIDANCE COMPUTER
622-8737-XXX	CTL-22A	COMM CONTROL
622-8738-XXX	CTL-32A	NAV CONTROL
622-8739-XXX	CTL-62A	ADF CONTROL
622-8740-XXX	CTL-92A	ATC CONTROL
622-8778-XXX	FGC-65C	FLIGHT GUIDANCE COMPUTER
622-9046-XXX	APC-65E	AUTOPILOT COMPUTER
622-9046-XXX	APC-65E	AUTOPILOT COMPUTER
622-9266-XXX	APC-65G	AUTOPILOT COMPUTER
622-9267-XXX	APC-65F	AUTOPILOT COMPUTER
622-9724-XXX	APC-65H	AUTOPILOT COMPUTER
622-9785-XXX	APC-65J	AUTOPILOT COMPUTER
7000839-XXX	RA-315/335	RADIO ALTIMETER IND
7001840-XXX	RT-300	RADIO ALTIMETER R/T
772-1467-001	562C-4C	AUTOPILOT AMPLIFIER
772-5130-XXX	562A-5M	FLIGHT COMPUTER
772-5131-XXX	562C-4A	AUTOPILOT AMPLIFIER
772-5132-XXX	161E-2	MODE COUPLER
772-5410-001	614E-13	MODE SELECTOR
777-1492-XXX	51Y-7	ADF RECEIVER
777-1493-XXX	614L-11	ADF CONTROL
787-6211-XXX	621A-6	TRANSPONDER
787-6226-XXX	339F-8B	DME INDICATOR
787-6366-XXX	614L-12	ADF CONTROL
792-6216-XXX	51Y-7A	ADF RECEIVER
792-6275-XXX	614L-13	ADF CONTROL
792-6293-001	51R-8B	NAV RECEIVER
792-6348-XXX	614E-5A	AUTOPILOT CONTROLLER
792-6484-001	614E-4B	AUTOPILOT CONTROLLER
792-6657-001	VHF-20	COMM R/T
792-6669-XXX	614E-23E	MODE SELECTOR
792-6703-XXX	562A-5M5	FLIGHT COMPUTER
792-6978-001	792-6978-001	INS BATTERY
797-6470-XXX	614E-23C	MODE SELECTOR
800-0001-000	FCI-1	JETPHONE
800-0002-XXX	C-3	CABIN CONTROL
800-0003-XXX	C-4	COCKPIT CONTROL
800-0004-XXX	HH-4	HANDSET
800-0005-XXX	C-3HF	CABIN CONTROL
8095259-XXXX	CD-402B	COMM CONTROL
8095260-XXXX	CD-412B	NAV CONTROL

8095261-XXXX	CD-422B	ATC CONTROL
8095262-XXXX	CD-432()	ADF CONTROL
8095263-XXXX	SD-442B	DME INDICATOR
8095444-XXXX	CD-413B	NAV CONTROL
8095536-8101	RS-811A	RADAR ART
8095537-XXXX	IN-812A	RADAR INDICATOR
87C005-01	4100	SLIP/SKID/SENSOR
92D023-02	3019B	TRIM CONTROL
93A055-XX	A55B	CVR CONTROL
93A100-10	A100/A	CVR
93A150-20	A150	CVR CONTROL
93A151-00	A151B	CVR CONTROL
93A152-00	A152	CVR CONTROL
97573-300	814B	TRANSPONDER
97637-XXXX	914 A/B	TRANSPONDER
A610-1	A610-1	AMP
G-1124	G-1124	CONTROL
G-1162A	G-1162A	CONTROL
G-1164E	G-1164E	CONTROL
G-1169	G-1169	CONTROL
G-1170	G-1170	CONTROL
G1170E	G-1170E	CONTROL
G-1191	G-1191	CONTROL
G-1248B-1	G-12488-1	CONTROL
G-1403	G-1403	CONTROL
G-1435	G-1435	CONTROL
G-1446A	G-1446A	CONTROL
G-1446B	G-1446B	CONTROL
G-1492	G-1492	CONTROL
G-1511-1	G-1511-1	CONTROL
G-1518	G-1518	CONTROL
G-1519	G-1519	CONTROL
G-1548	G-1548	CONTROL
G1571	G-1571	CONTROL
G-1574C	G-1574C	CONTROL
G-1614	G-1614	CONTROL
G-1664A-	G-1664AX	CONTROL
G-1707A	G-1707A	CONTROL
G-1712	G-1712	CONTROL
G-1713	G-1713	CONTROL
G-1715	G-1715	CONTROL
G-1728	G-1728	CONTROL
G1728B	G-1728B	CONTROL
G-1834A-1	G-1834A-1	CONTROL
G-1860	G-1860	CONTROL
G-1980	G-1980	CONTROL
G-1994B	G-1994B	CONTROL
G-2139A	G-2139A	SELECTOR PANEL
G-2289	G-2289	CONTROL
G-2343	G-2343	CONTROL
G-2349A	G-2349A	CONTROL
G-2580	G-2580	CONTROL

G-2870A	G-2870A	CONTROL
G-2886	G-2886	CONTROL
G-3014A	G-3014A	CONTROL
G-3245	G-3245	CONTROL
G-3425A	G-3425A	CONTROL
G-3440	G-3440	Speaker
G-3679	G-3679	CONTROL
G-3718	G-3718	CONTROL
G-3806	G-3806	CONTROL
G-3814	G-3814	CONTROL
G-3905	G-3905	CONTROL
G-3926	G-3926	CONTROL
G-4155	G-4155	CONTROL
G-4409	G-4409	CONTROL
G-4426	G-4426	CONTROL
G-4506	G-4506	CONTROL
G-4507	G-4507	CONTROL
G-4537	G-4537	CONTROL
G-4606A	G-4606A	CONTROL
G-4607A	G-4607A	CONTROL
G-4745A	G-4745A	CONTROL
G-4933	G-4933	CONTROL
G-5377	G-5377	CONTROL
G-5392F	G-5392F	CONTROL
G-5450	G-5450	CONTROL
G-5481	G-5481	CONTROL
G-5481A	G-5481A	CONTROL
G-551/G551W	G-551/G551W	CONTROL
G-5552	G-5552	CONTROL
G-5609	G-5609	CONTROL
G-610-11	G-610-11	AMP
G610-11	G610-11	AMP
G-6425	G-6425	CONTROL
G-6426	G-6426	CONTROL
G-6728B	G-6728B	CONTROL
G-808	G-808	CONTROL
G-863	G-863	CONTROL
GA-100-0000	GA-100	CVR
MI-55034-1	AVQ-47	RADAR ANT
MI-585000-X	AVI-200	RMI/CONVERTER
MI-585001-X	AVI-201	RMI
MI-585002-X	AVI-202	RMI CONV INDICATOR
MI-585008-X	AVQ-21	RADAR ANT
MI-585009	AVQ-21	RADAR R/T
MI-585011-X	AVQ-21	INDICATOR
MI-585015-X	AVQ-85	DME R/T
MI-585017-X	AVQ-85	DME INDICATOR
MI-585019	AVQ-95	TRANSPONDER
MI-585020-X	AVQ-95	TRANSPONDER
MI-585031-X	AVN-220	NAV RECEIVER
MI-585032-X	AVN-221	NAV RECEIVER
MI-585044-X	AVC-111A	COMM

MI-585048	AVQ-85	SYNCHRO CONVERTER
MI-585072	AVN-210A	NAV RECEIVER
MI-585073-X	AVN-220A	NAV RECEIVER
MI-585074-X	AVC-110A	COMM R/T
MI-585075-X	AVN-221A	NAV RECEIVER
MI-585077	AVN-211A	NAV RECEIVER
MI-585101-X	PRIMUS-10	DME R/T
MI-585134-X	PRIMUS-40	RADAR INDICATOR
MI-585135-X	PRIMUS-40	RADAR INDICATOR
MI-585136-1	PRIMUS-40	RADAR ANTENNA
MI-585147-1	PRIMUS-20	RADAR INDICATOR
MI-585148-X	PRIMUS-20	RADAR ANTENNA
MI-585149-X	PRIMUS-20	RADAR R/T
MI-585150	PRIMUS-30	RADAR INDICATOR
MI-585151-X	PRIMUS 30	RADAR ANTENNA
MI-585152	PRIMUS-35	RADAR R/T
MI-585157	PRIMUS-20	RADAR ANTENNA
MI-585171	PRIMUS-20	RADAR INDICATOR
MI-585191-2	PRIMUS-20	RADAR INDICATOR
MI-585192	PRIMUS-30	RADAR INDICATOR
MI-585200-X	RT-4001	RADAR R/T
MI-585201-X	DI-4001	RADAR INDICATOR
MI-585202-X	AP-4001	RADAR ANTENNA
MI-585203	PRIMUS-31	RADAR INDICATOR
MI-585204	PRIMUS-31	RADAR R/T
MI-585205-1	PRIMUS-31	RADAR ANTENNA
MI-585206-X	PRIMUS-21	RADAR INDICATOR
MI-585207	PRIMUS-21	RADAR R/T
MI-585210-2	DI-2002	RADAR INDICATOR
MI-585210-3	DI-2004	RADAR INDICATOR
MI-585210-4	DI-2003	RADAR INDICATOR
MI-585210-5	DI-2005	RADAR INDICATOR
MI-585210-X	PRIMUS-20	RADAR INDICATOR
MI-585222	RT-3001	RADAR R/T
MI-585222-X	RT-3002	RADAR R/T
MI-585223-X	DI-2006	RADAR INDICATOR
MI-585224-X	AP-3001	RADAR ANTENNA
MI-585228-X	DI-3003	RADAR INDICATOR
MI-585232-X	PRIMUS-30	RADAR INDICATOR
MI-585255-X	RTA-1001	RADAR ART
MI-585256	DI-1001	RADAR INDICATOR
MI-585256-1	DI-1002	RADAR INDICATOR
MI-585256-2	DI-1004	RADAR INDICATOR
MI-585256-3	DI-1003	RADAR INDICATOR
MI-585264-X	RTA-1002	RADAR ART
MI-585277-X	DI-2007	RADAR INDICATOR
MI-585280	RTA-1003	RADAR R/T
MI-585280-1	RTA-1003	RADAR R/T
MI-585300-X	RT-5001	RADAR R/T
MI-585300-X	RT-5001	RADAR R/T
MI-585301-X	DI-5001	RADAR INDICATOR
MI-585302-X	AP-5001	RADAR ANTENNA

part.query

MI-585322-X	PRIMUS-100	RADAR INDICATOR
MI-585343-X	DI-4002	RADAR INDICATOR
MI-585438-X	PRIMUS-150	INDICATOR
MI-585439-X	PRIMUS-150	INDICATOR
MI-591083-X	AVQ-75	DME R/T
MI-592019	AVQ-65	TRANSPONDER
MI-592100-X	AVN-210(X)	NAV RECEIVER
ZG-360	ZG-360	HOMING SYSTEM
ZG-360/25	ZG-360/25	HOMING SYSTEM